

Wireless Charging Tray Volkswagen

241320-50-2


INBAY

WIRELESS CHARGING

D

EINBAUANLEITUNG



Schwierigkeitsgrad

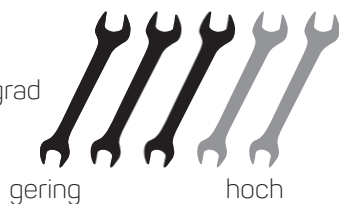

GB

INSTALLATION GUIDE

level of difficulty

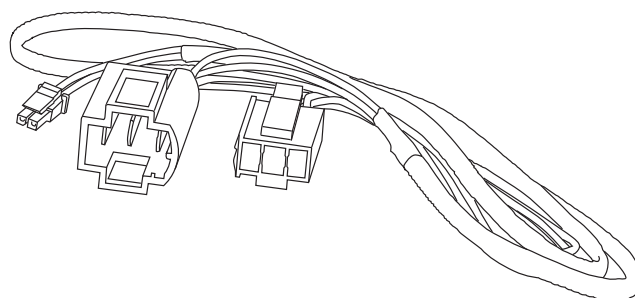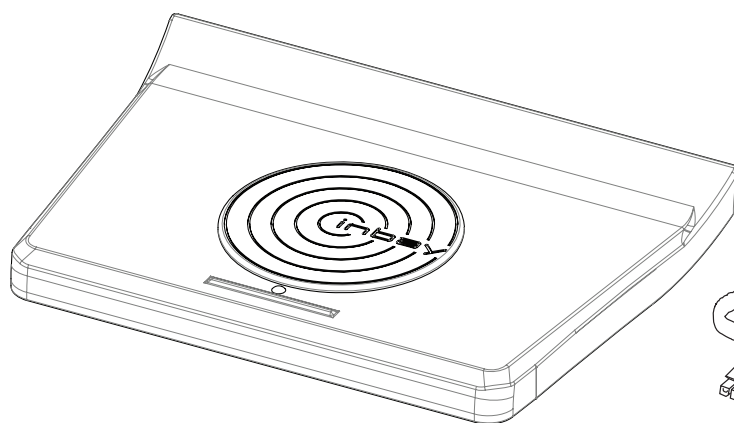

VW Eos (1F) 05/2006-04/2015
VW Golf V (1K) 11/2003-09/2008
VW Golf V Variant (1K) 06/2007-10/2009
VW Golf VI (1K) 11/2008-12/2012
VW Golf VI Variant (1KM) 11/2009-04/2013
VW Golf VI Cabrio (1K) 06/2011-03/2016

VW Jetta V (1KM) 09/2005-10/2010
VW Scirocco III (13) 08/2008->



Einbauvideo · Install video
www.inbay.systems/videos

Sachgemäße Installation unter Beachtung dieser Einbauanleitung erforderlich. Achten Sie auf korrekte Anschlüsse. Verlegen Sie die Kabel so, dass Sie weder geknickt, gequetscht oder beschädigt werden können. Sorgen Sie dafür, dass sich die Kabel nicht in Gegenständen verfangen können.

Wir können keine Haftung für Schäden übernehmen, welche durch unsachgemäße Installation oder Nutzung verursacht wurden. Verwenden Sie darum ausschließlich das mitgelieferte Montagematerial.

Technische Änderungen vorbehalten, alle Angaben ohne Gewähr.

Das „Qi“ Logo ist Warenzeichen des „Wireless Power Consortium“



An appropriate installation in observance of these operating instructions is necessary. Please make sure the wiring is arranged so it is not bended or crimped due to the risk of cable break. Make sure that all connections are correct. Route the cable away from moving parts, do not allow the cable to be entangled, pinched or damaged in any way.


We will not be liable for damage due to improper installation or utilization. Use the specified accessory parts to prevent product failure.

Subject to technical modifications; no responsibility is accepted for the accuracy of this information.


The “Qi” symbol is a trademark of the “Wireless Power Consortium”




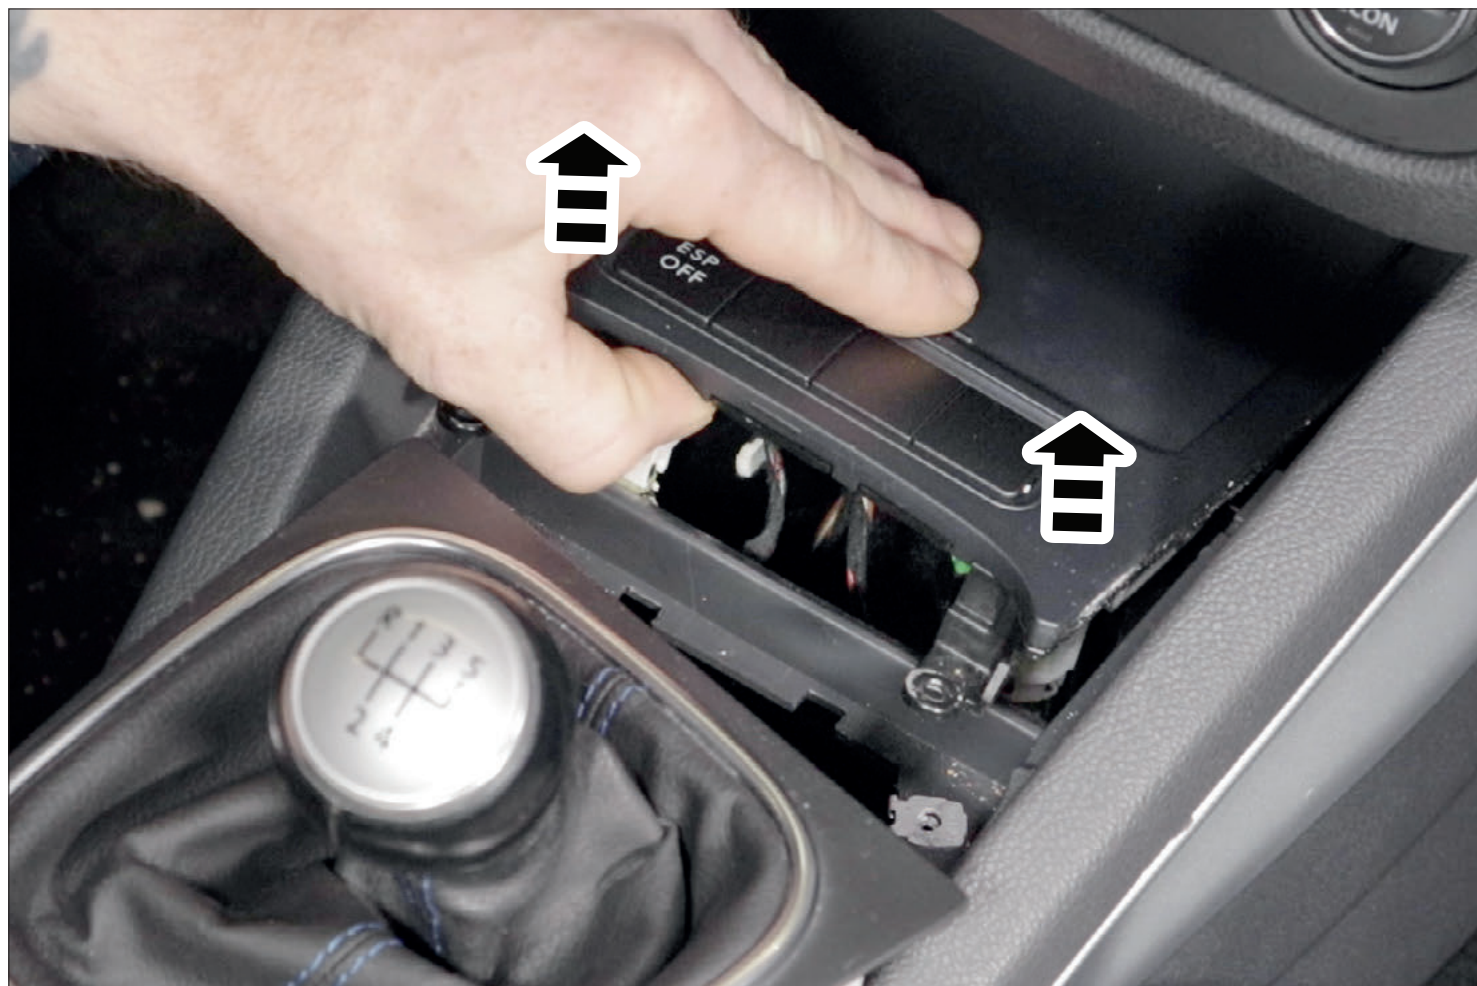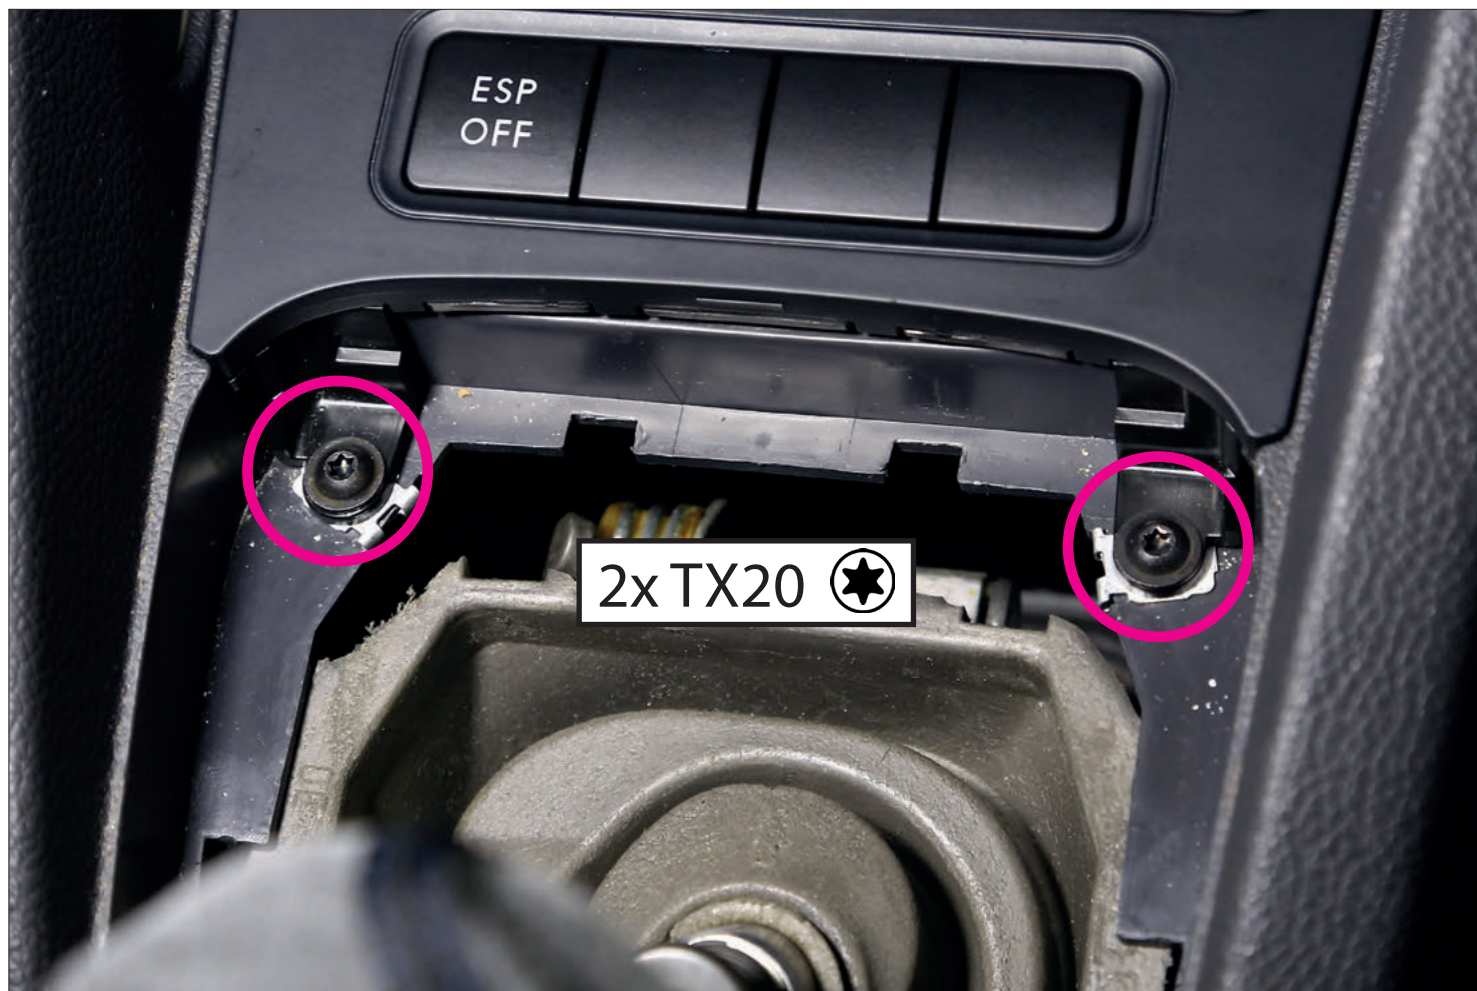


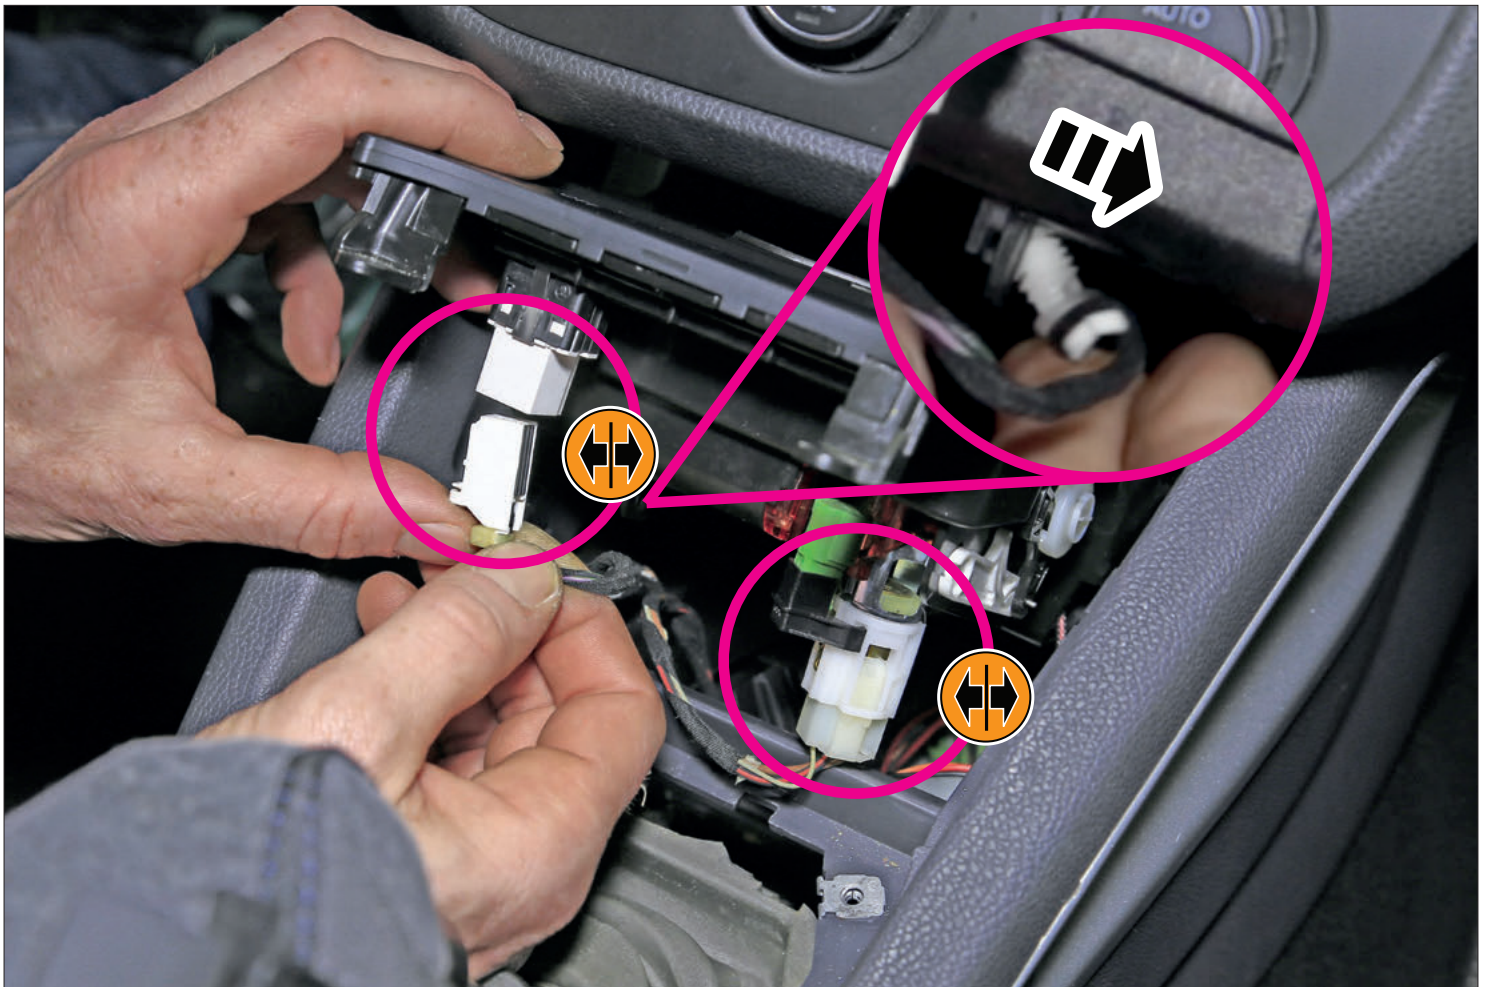






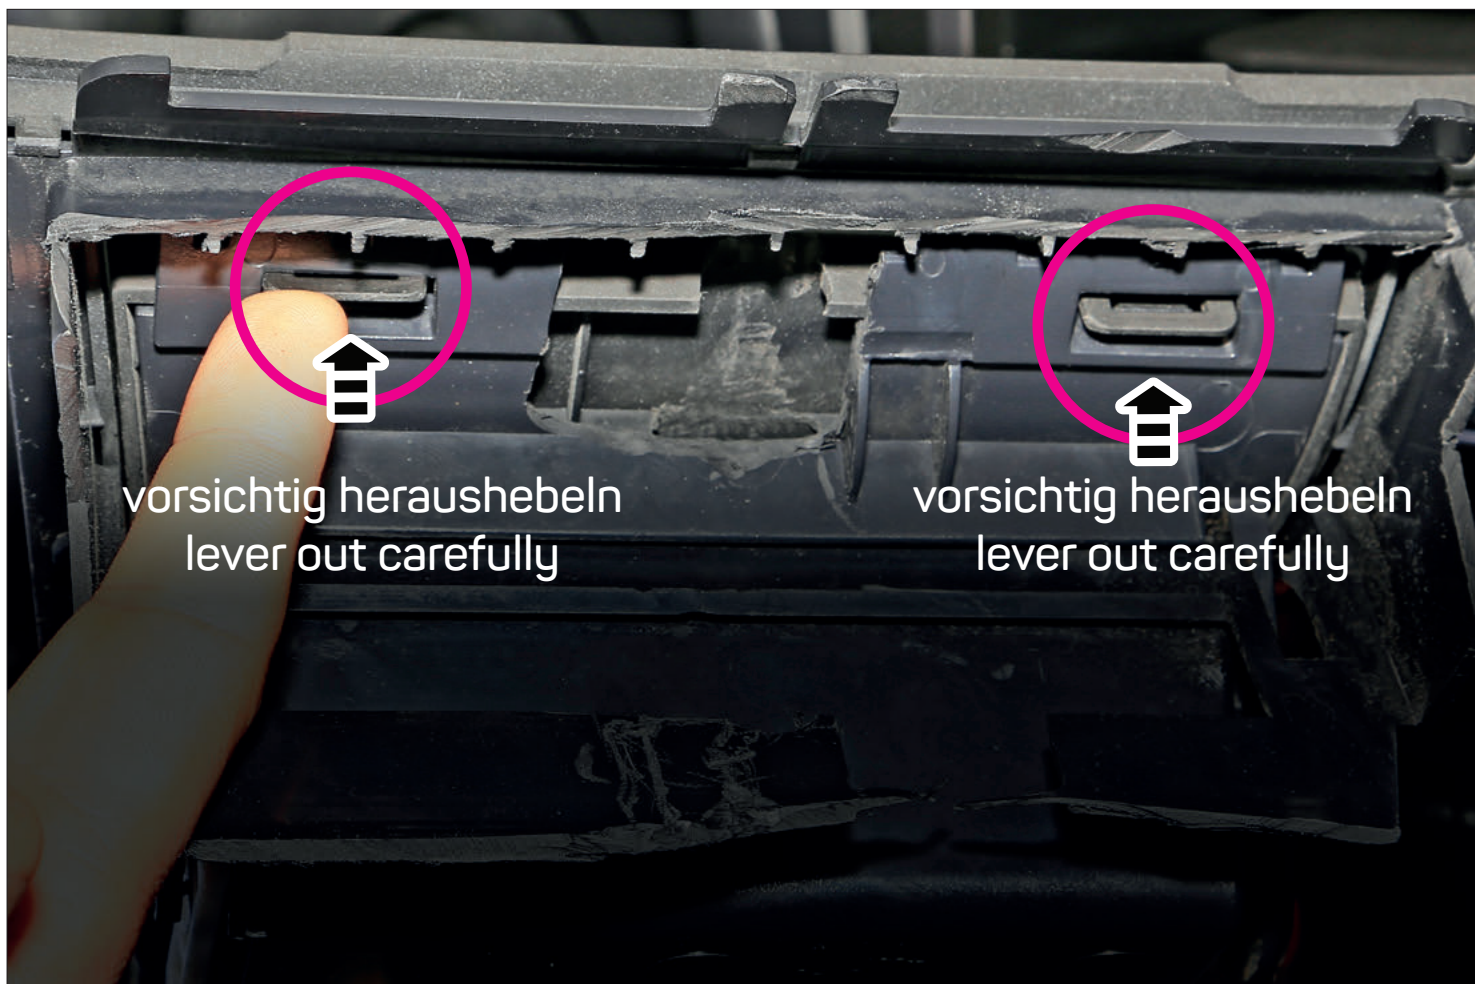



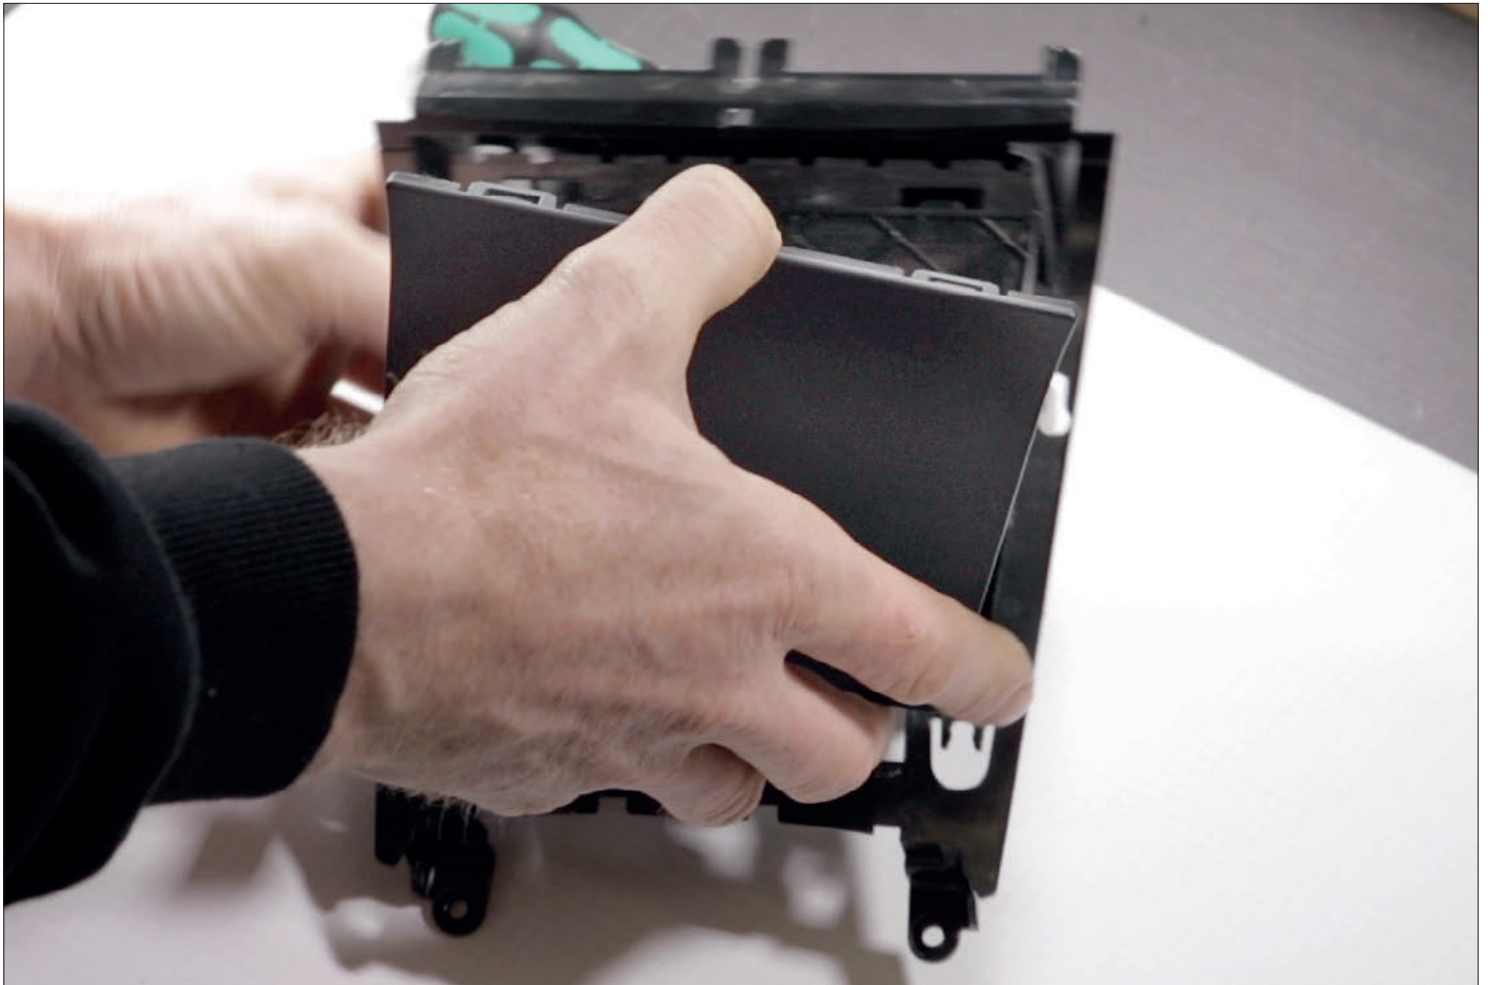



Bitte Kunststoff-Rippen entfernen, um
Platz für die inbay Platine zu schaffen
Please remove plastic fins in order to
clear space for PCB



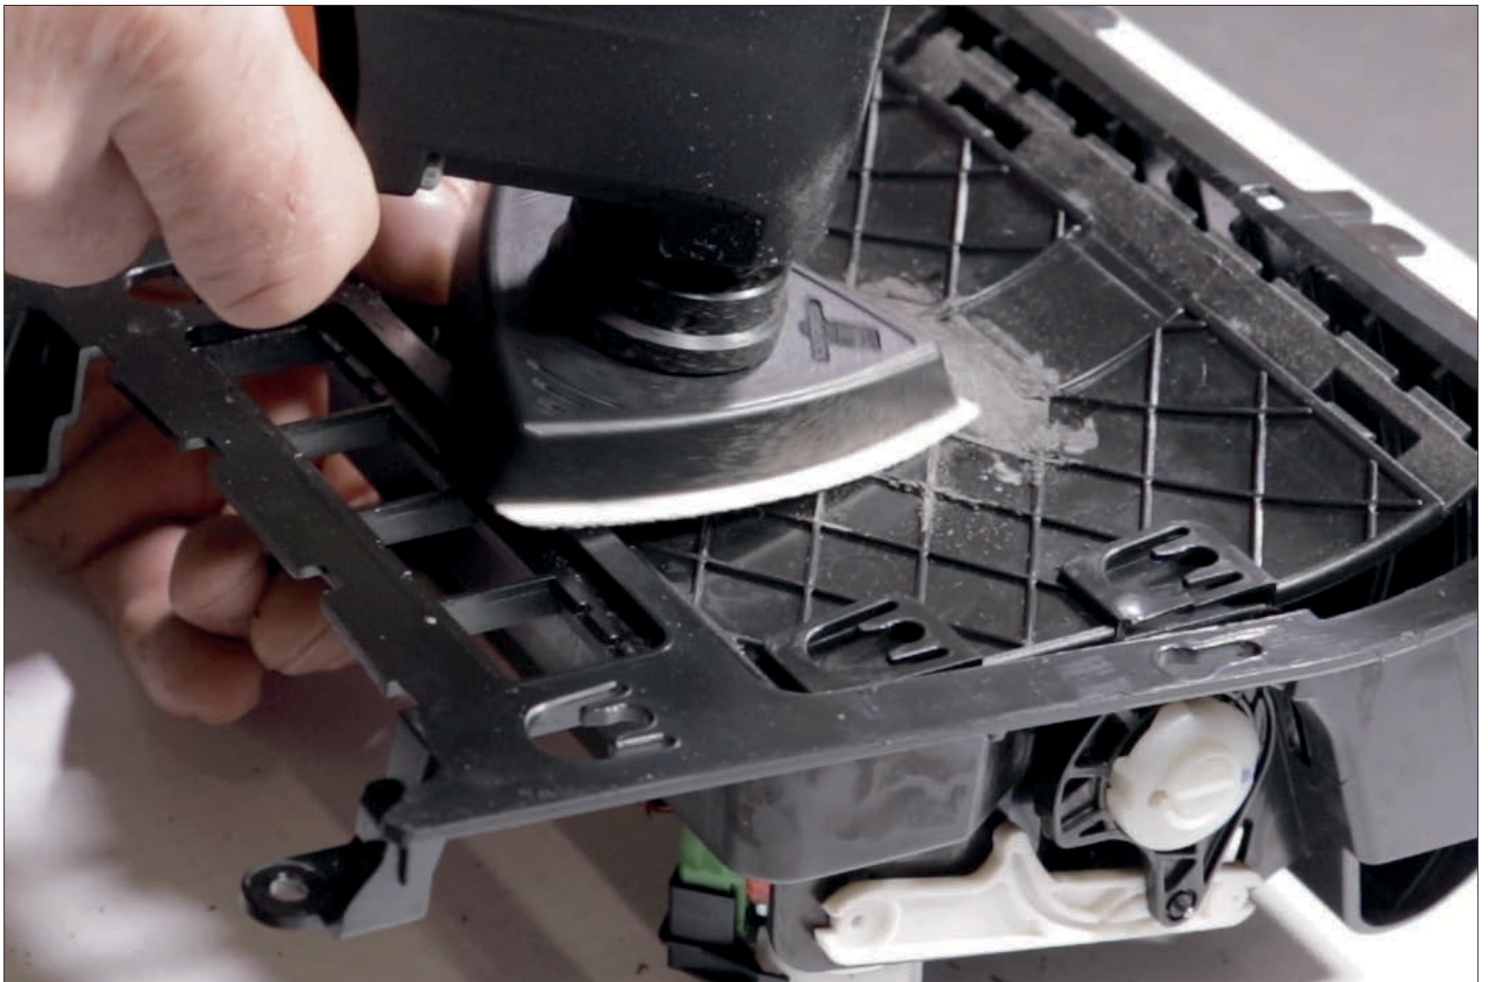
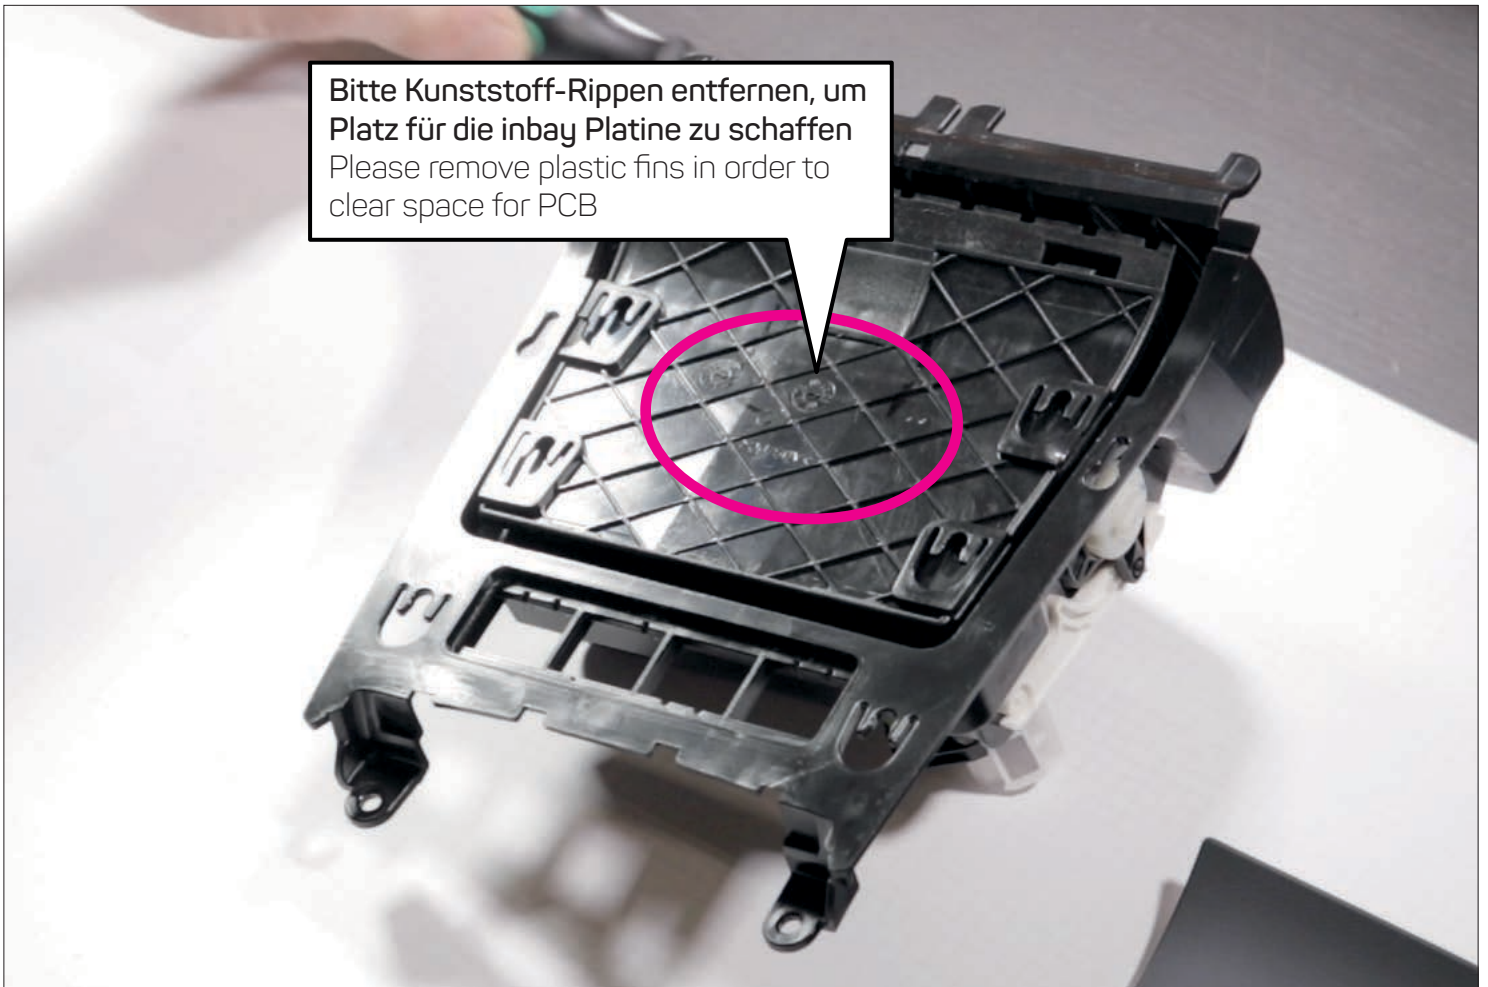


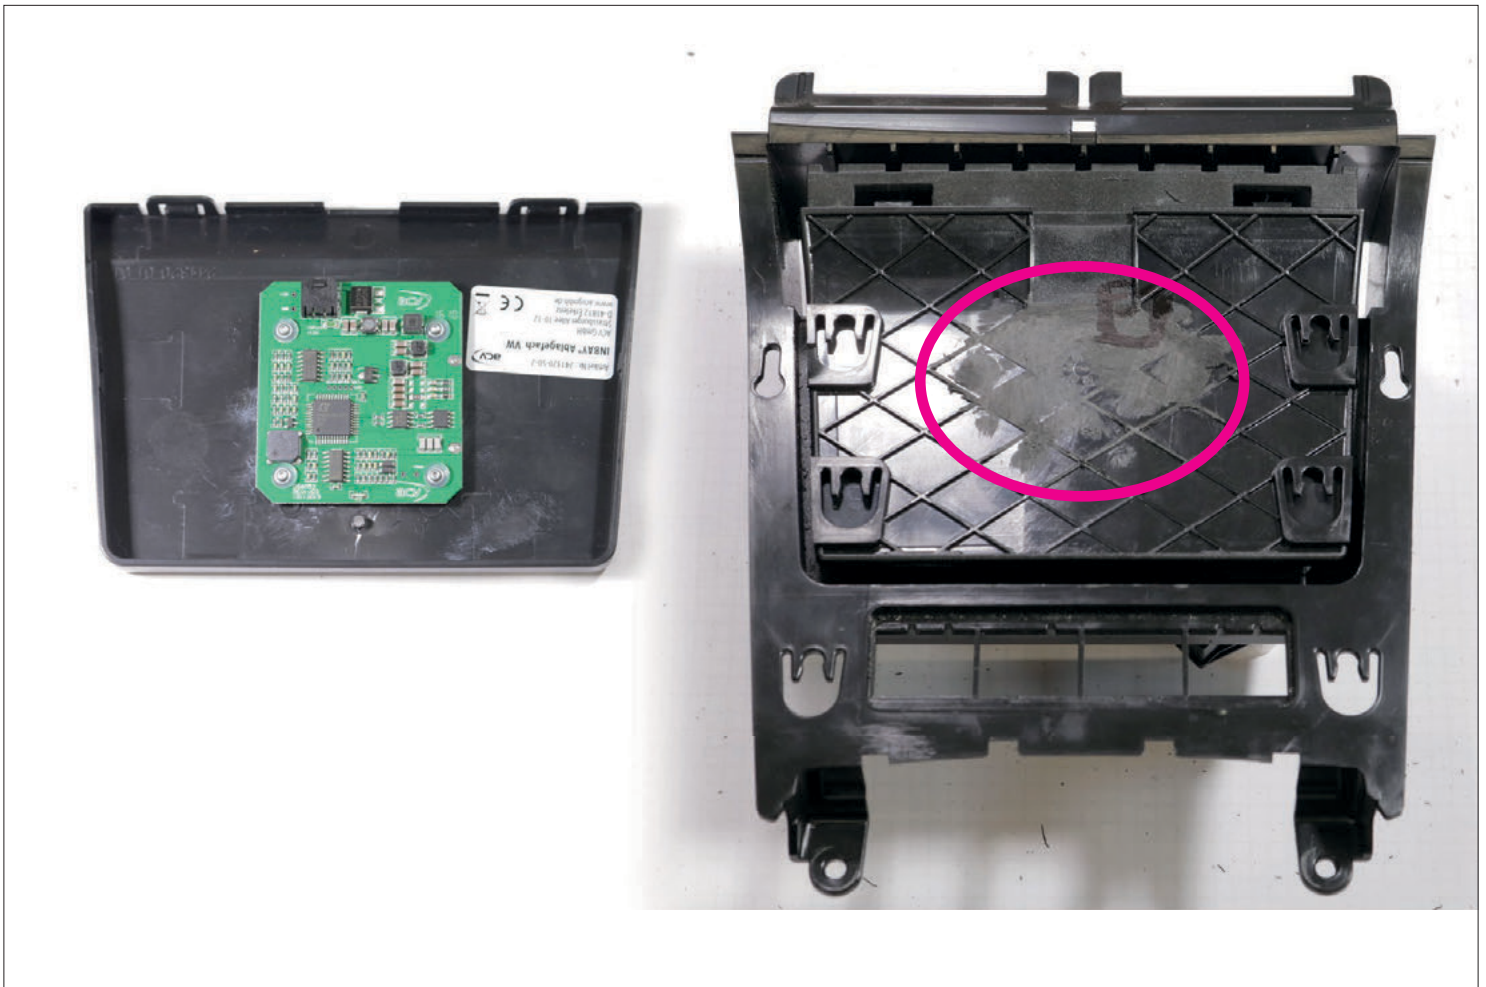


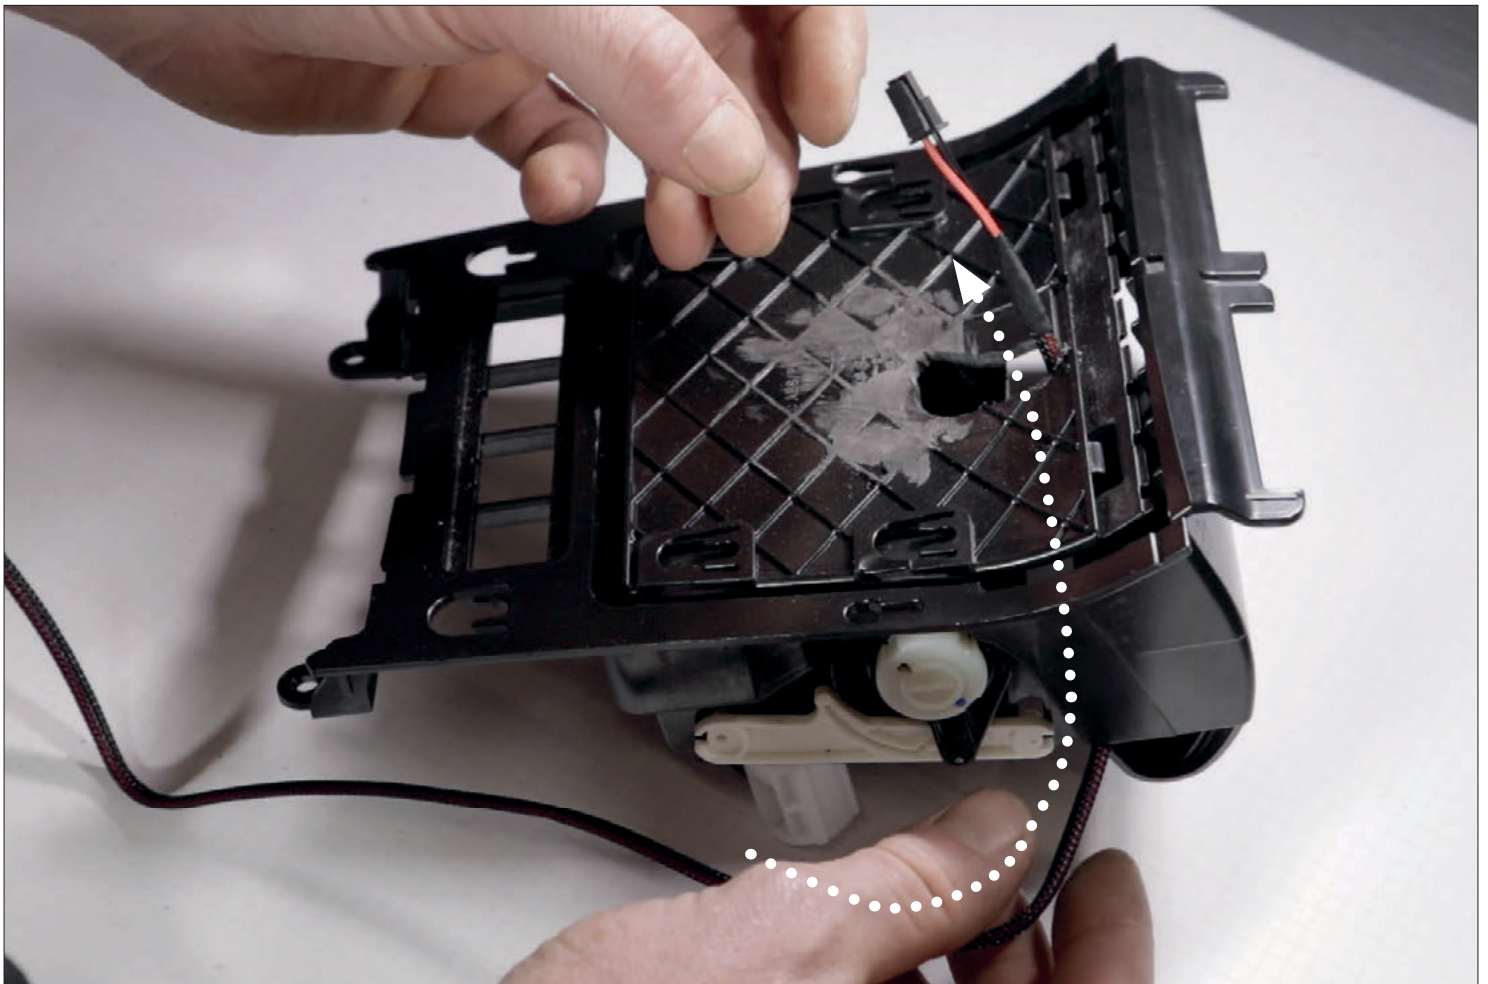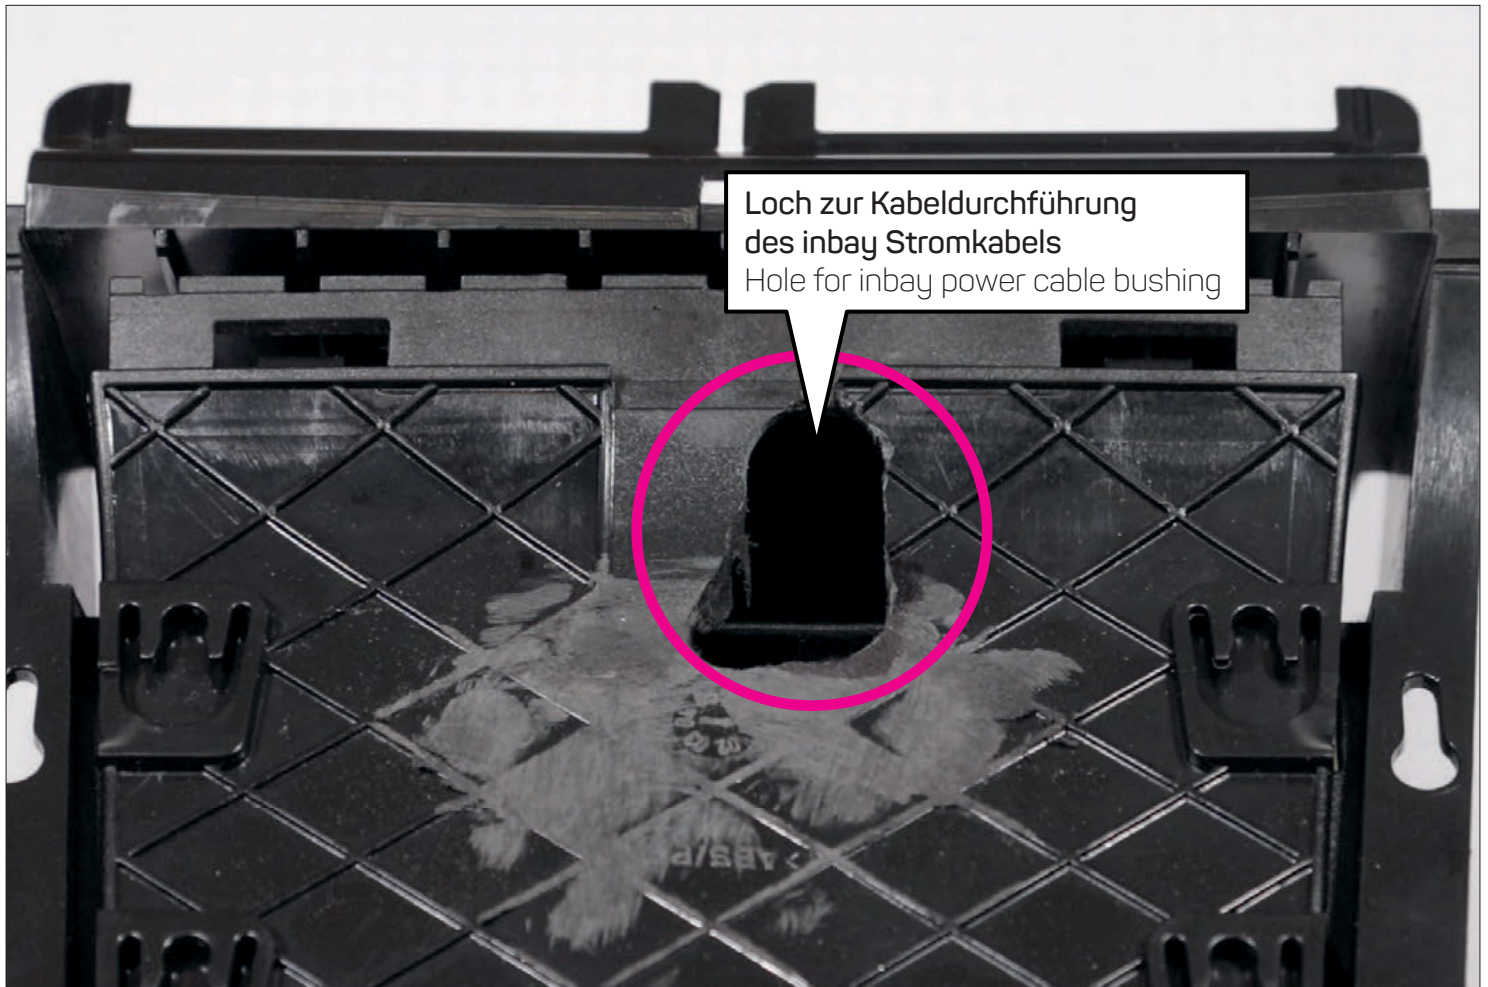


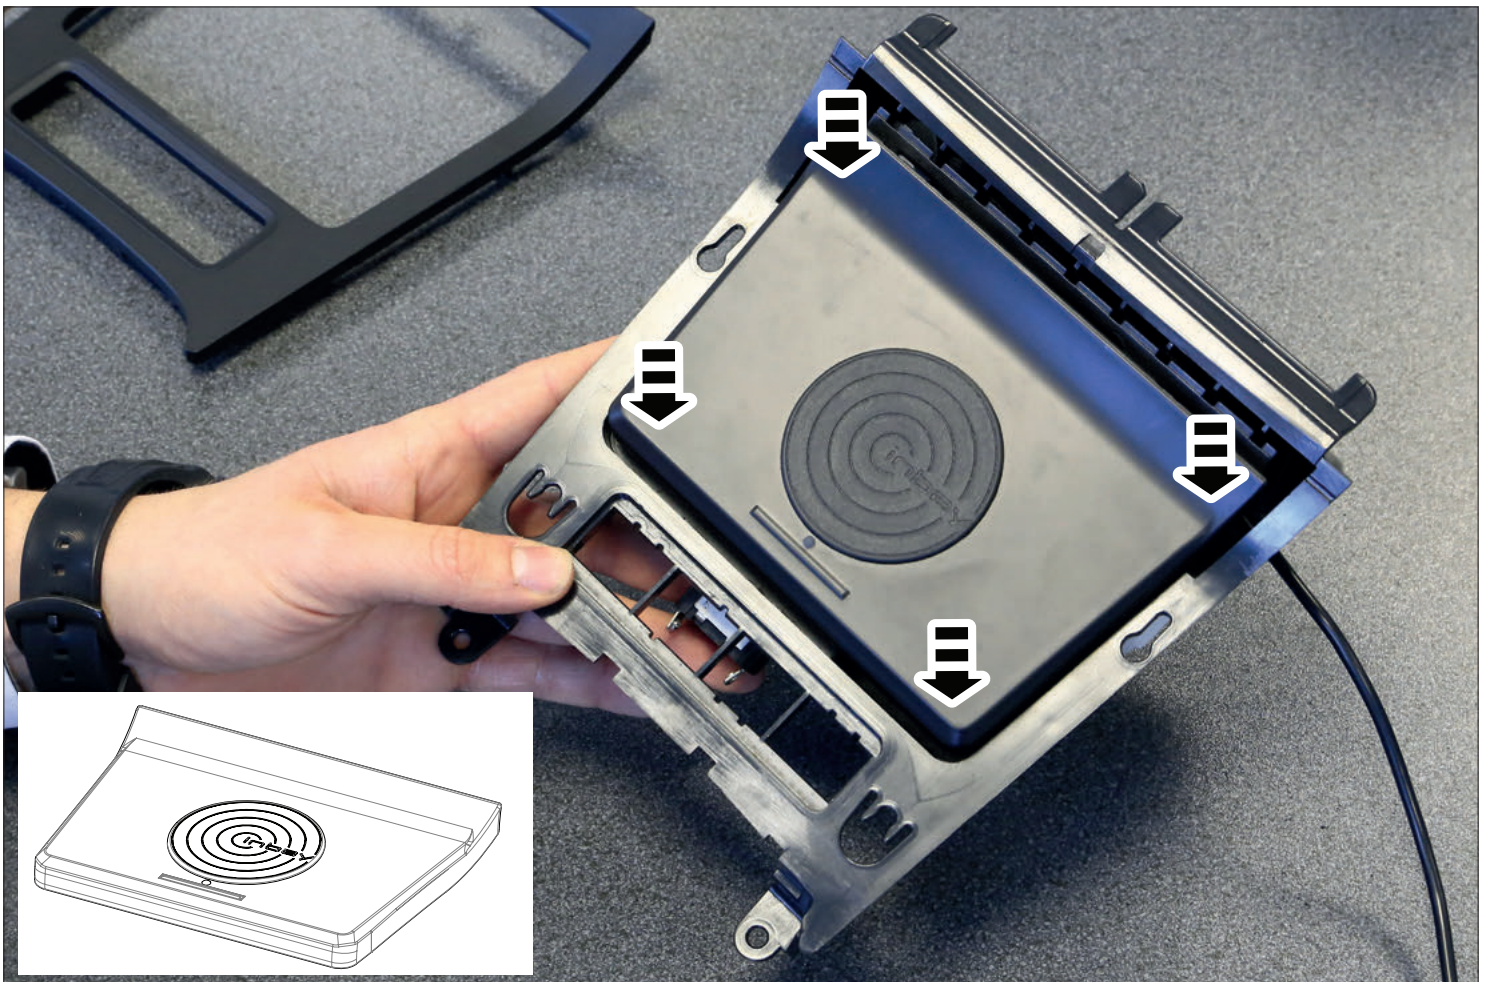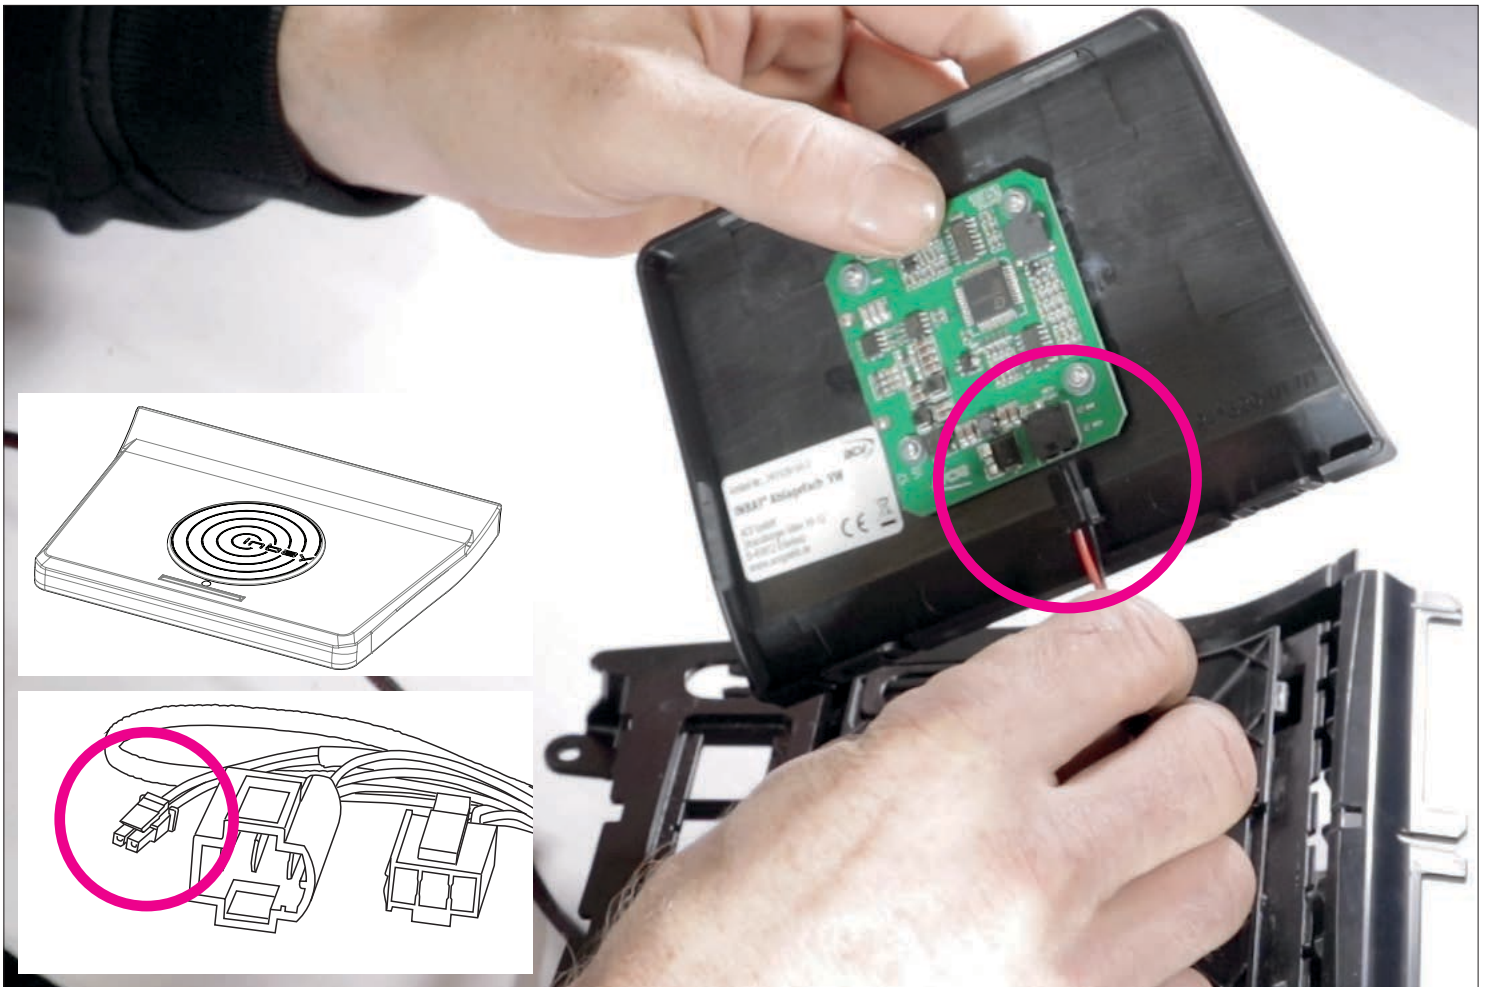


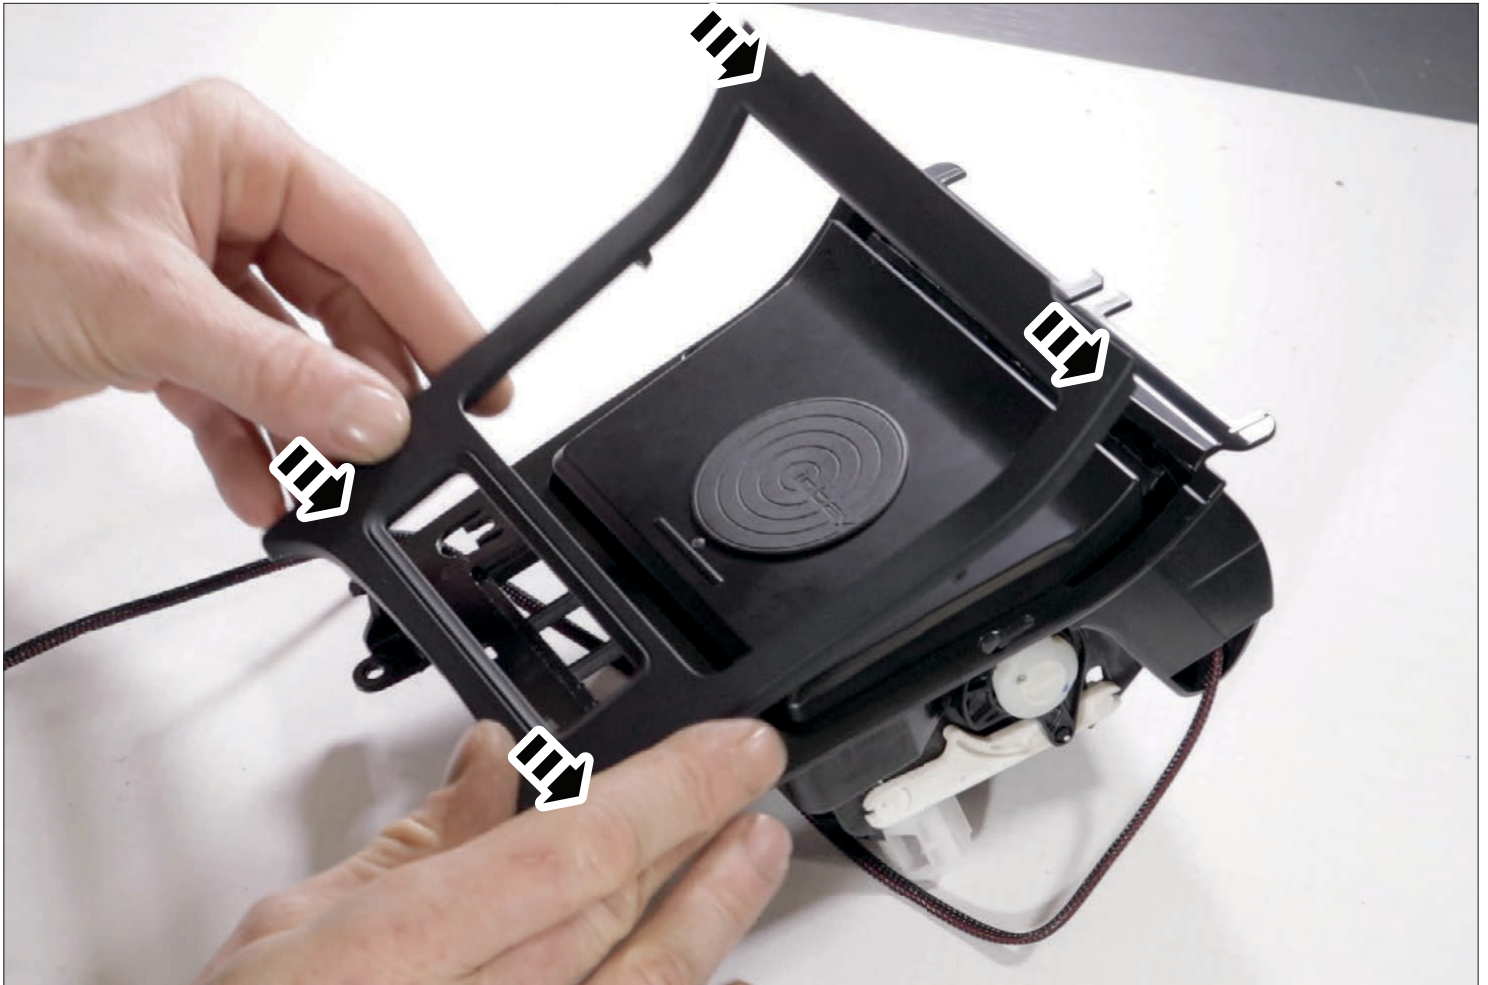

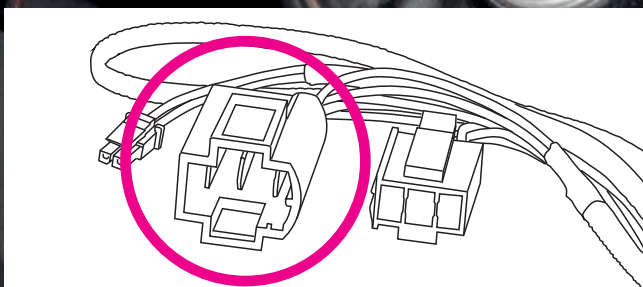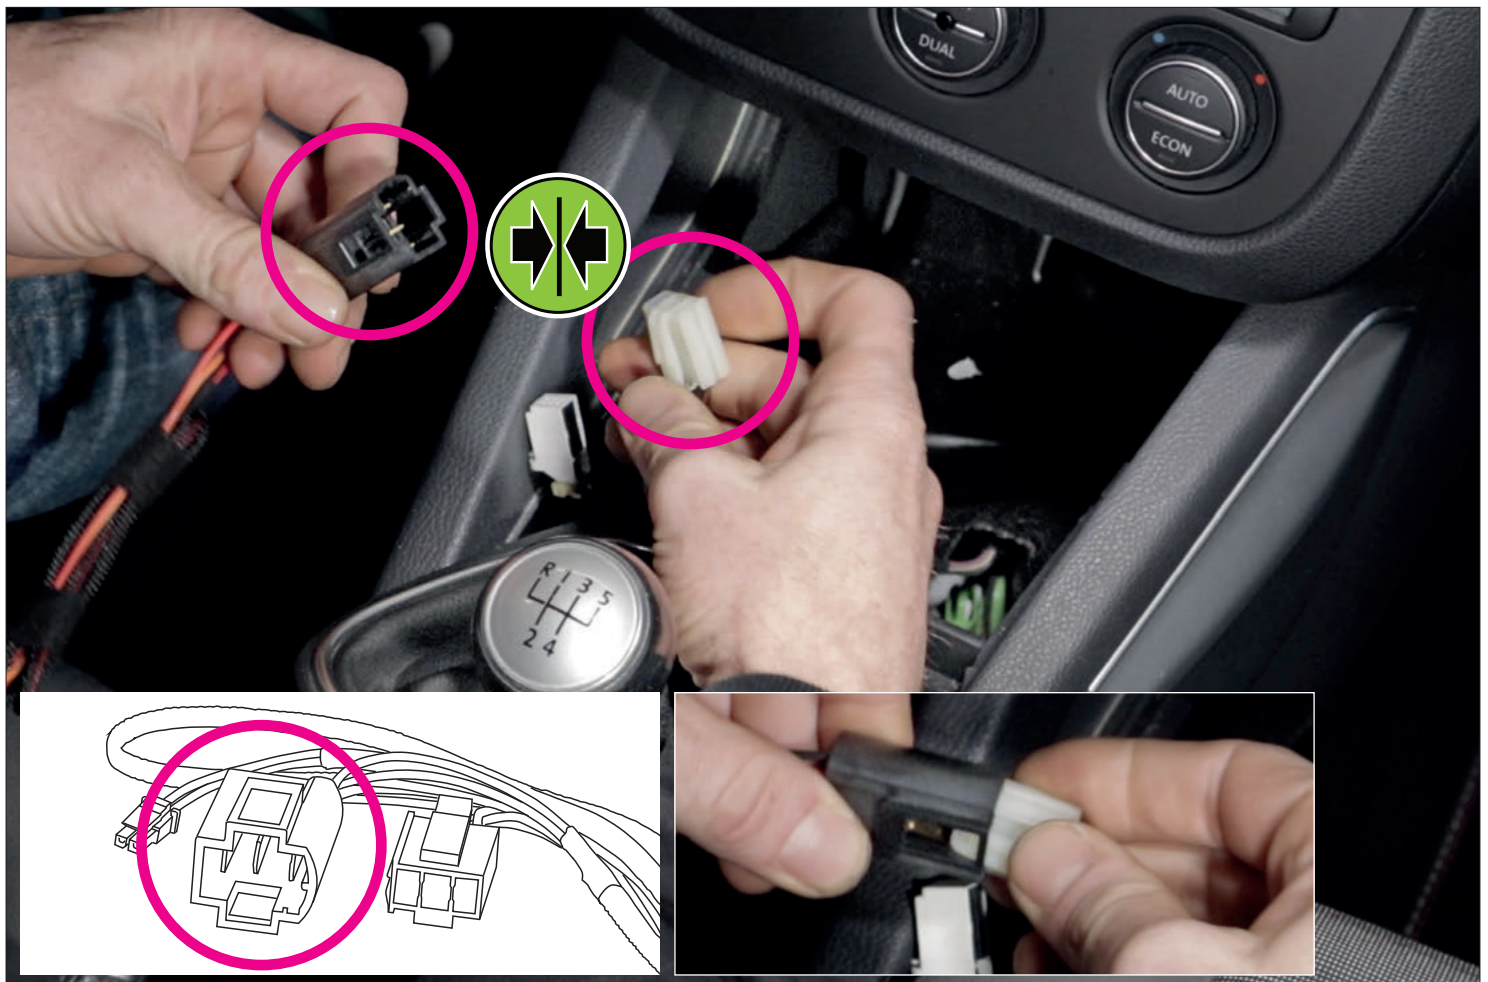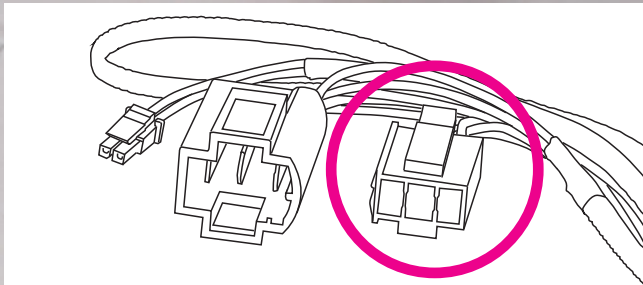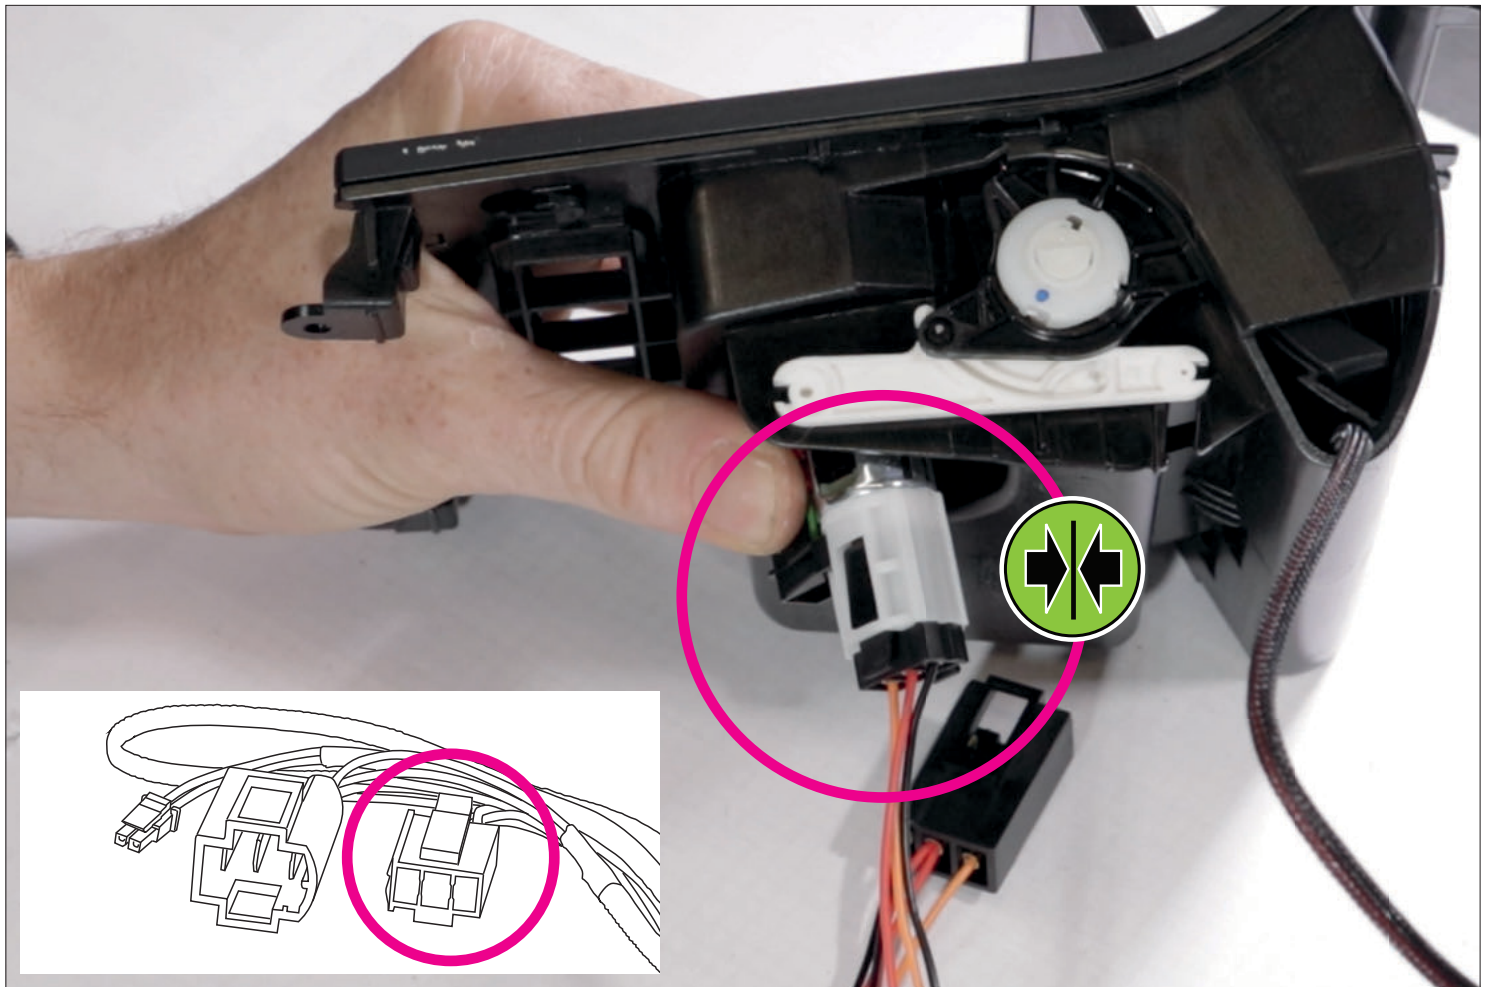

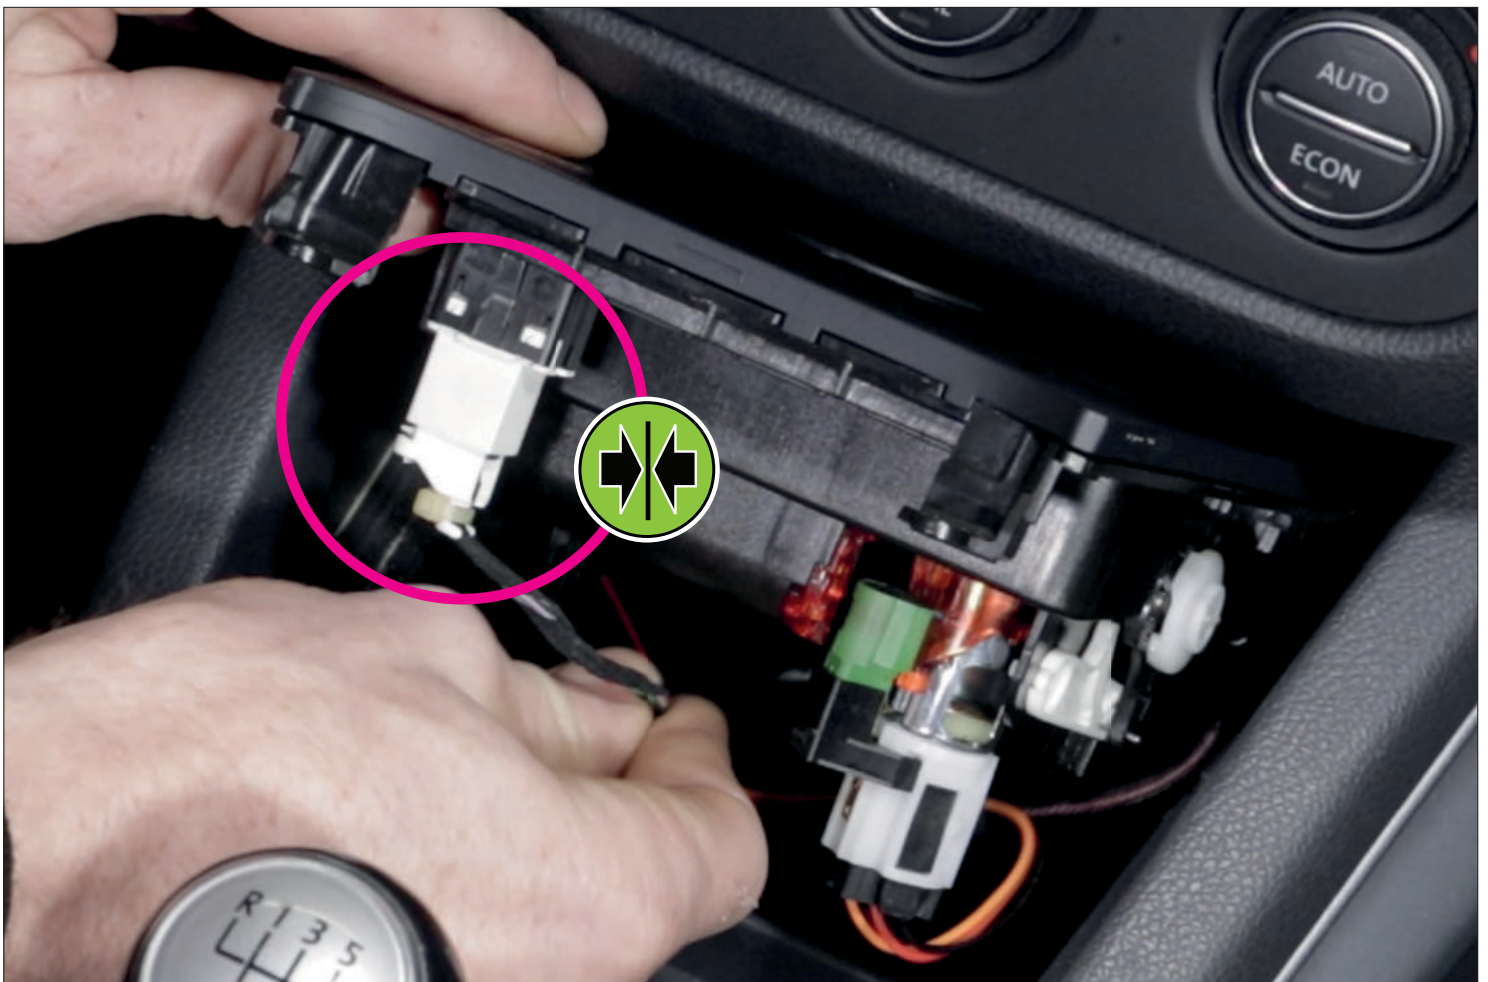

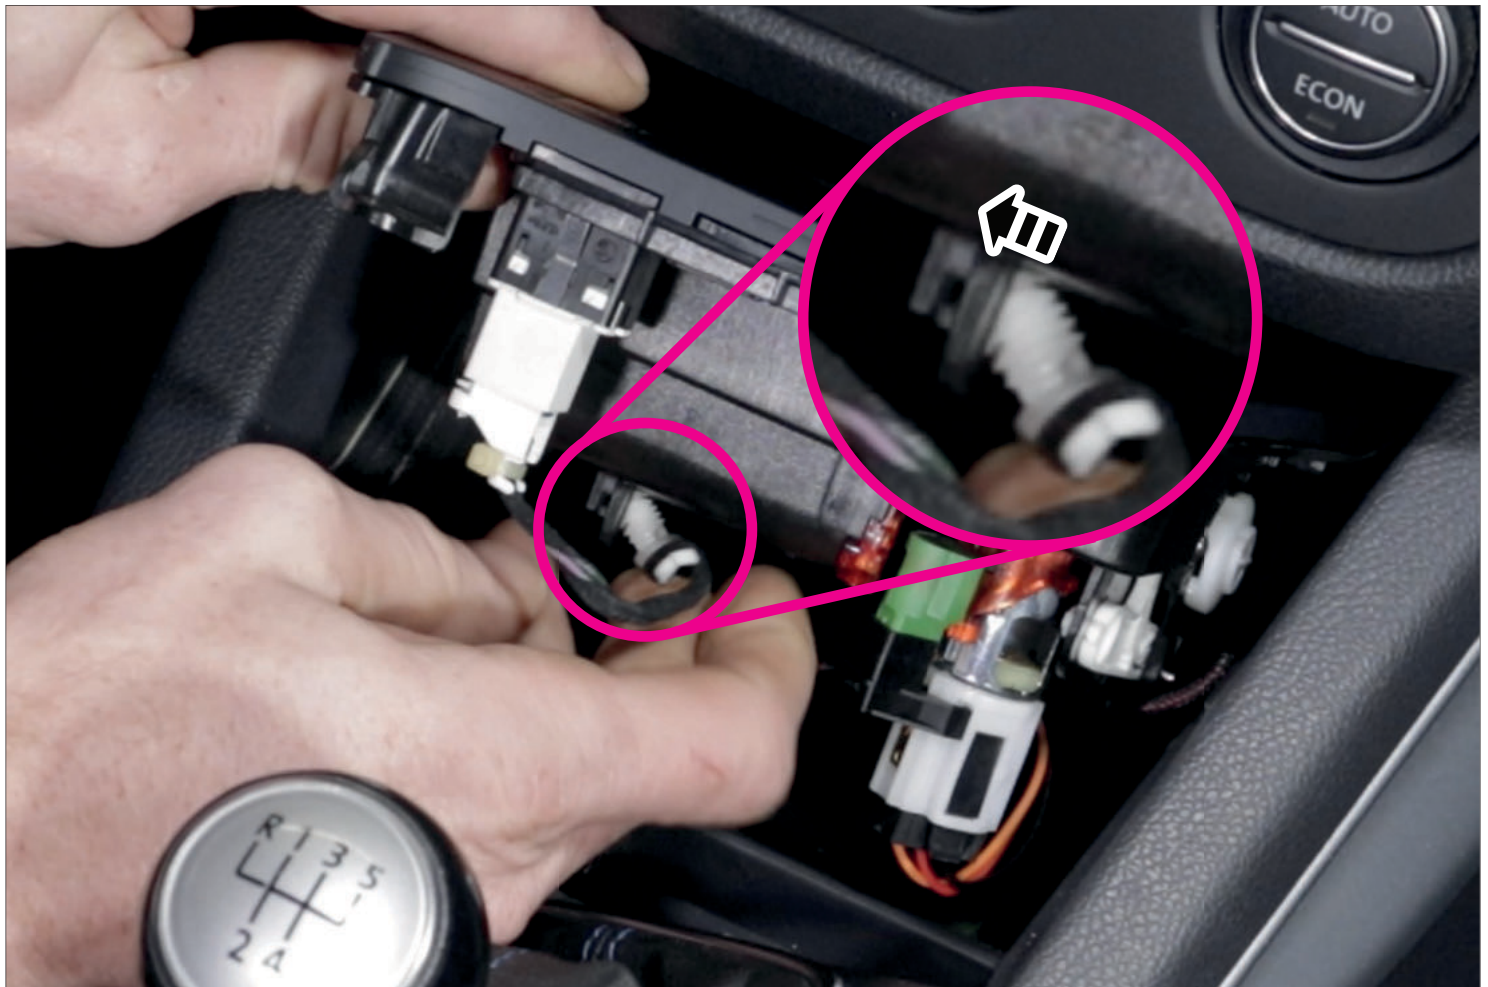

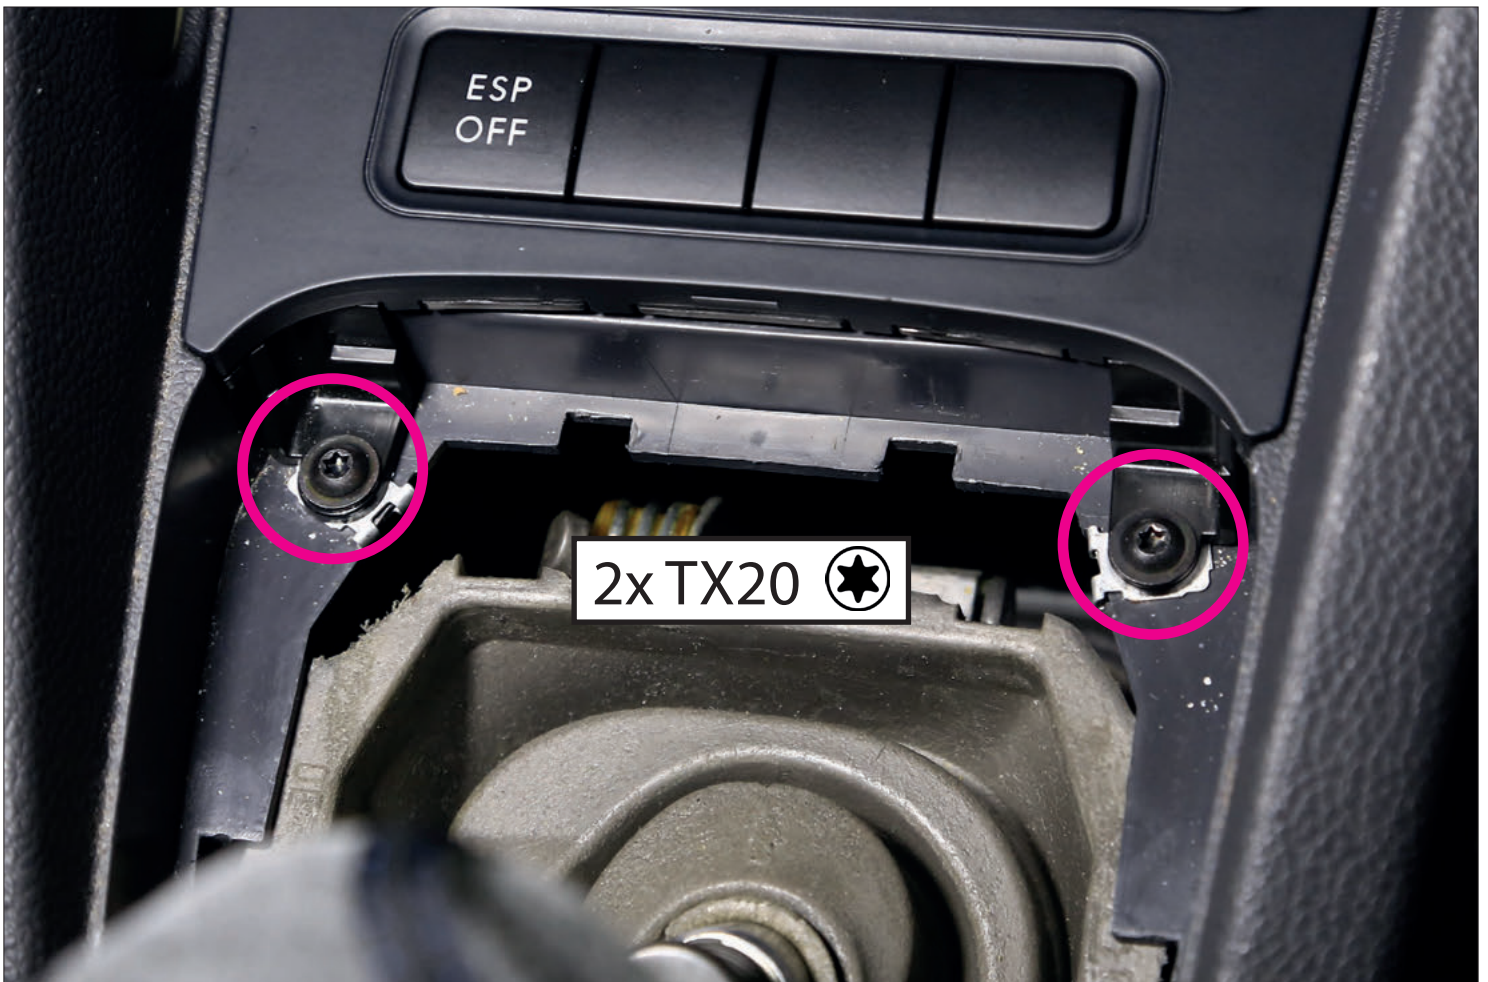





This image shows a full page of blank, lined paper. It features approximately 20 evenly spaced horizontal grey lines across the entire width of the page, providing a guide for writing. The background is a solid off-white color. There are no margins, text, or other markings present.

[illegible]